


TouchDirector ATEM/Mini/Pro Connection Diagram

with WorldTally integration

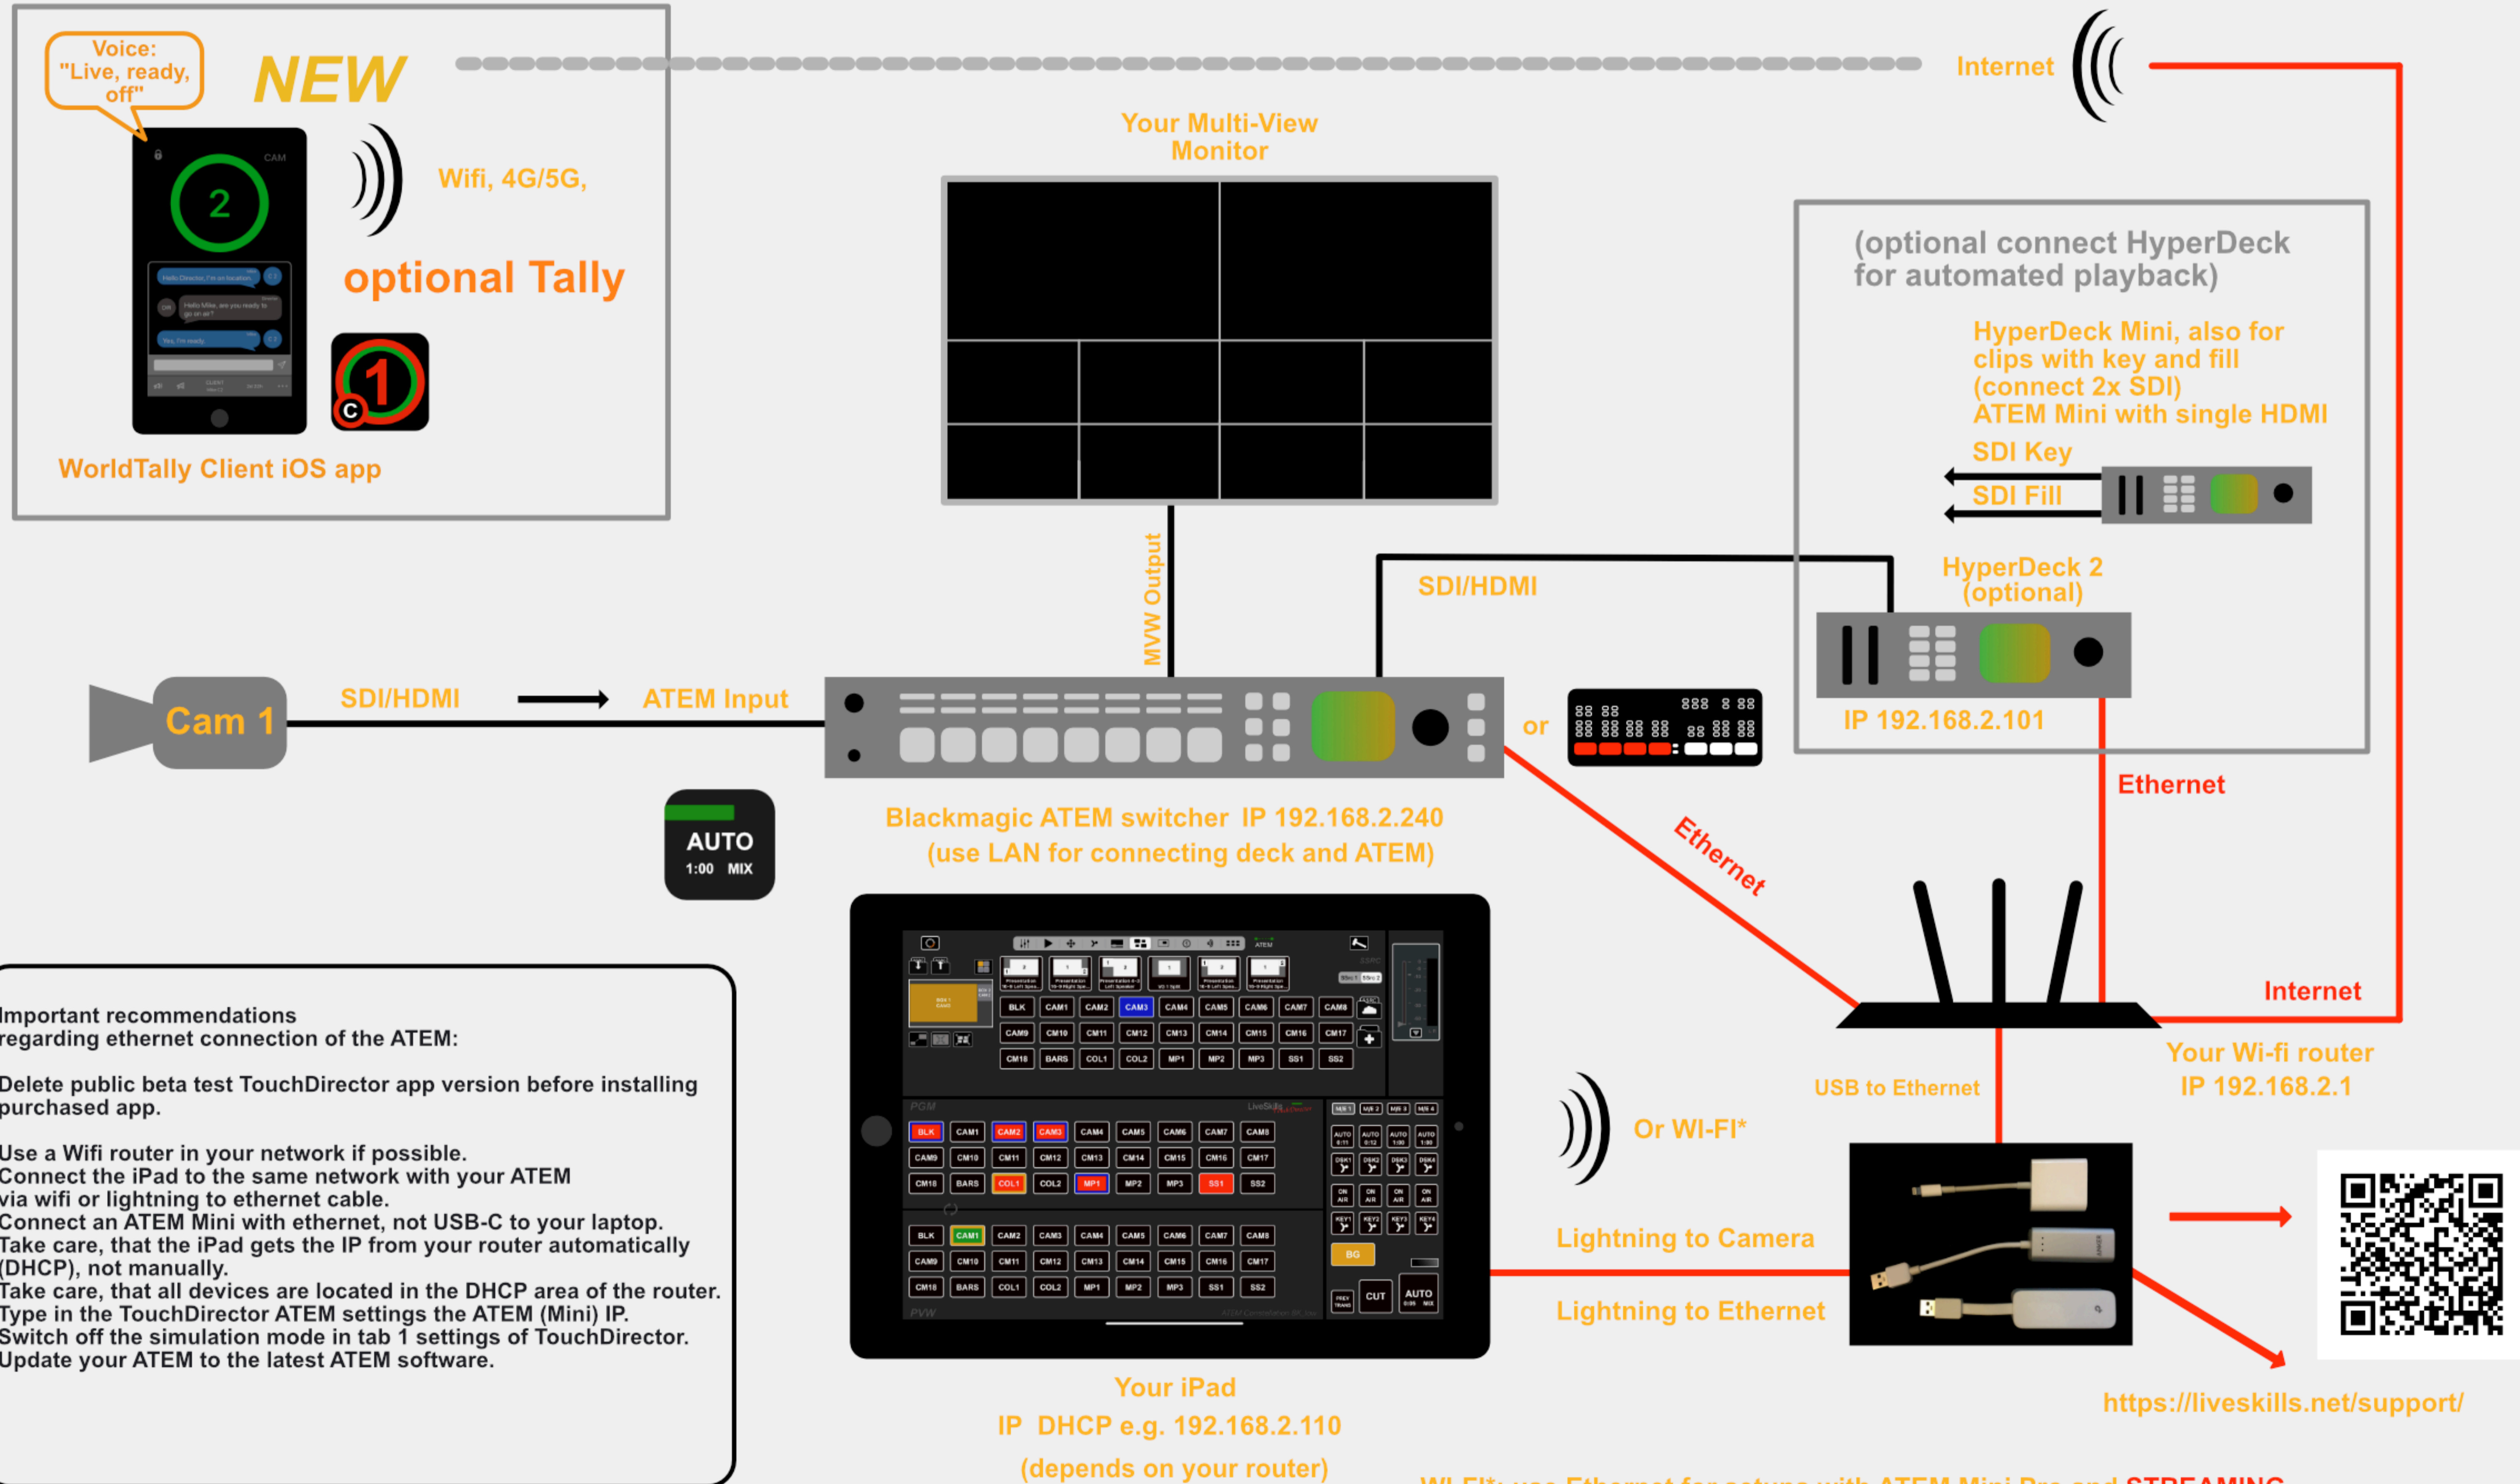

WI-FI*: use Ethernet for setups with ATEM Mini Pro and **STREAMING**, and for setups with ATEM and HyperDecks